


Part No.	Description
156-02	Housing
157-02	Cap
158	Valve
159	Stem
160	Sleeve
161	Exhaust Seat
162	Plug
163	Bumper
321	Tip
AS-319	Stroke Control Spacer
323	Bumper Pad
324	Mount Plate Assembly
325	Muffer Pad
326	Tool Cover
2-031	O-Ring
3-114	O-Ring
3-127	O-Ring
4-212	O-Ring (2 Req'd)
4-218	O-Ring
1/4-20 x 5/8"	Exhaust Screw
10-24 x 1 1/2"	Cap Screw (4 Req'd)
10-32 x 1/2"	Tool Cover Screw (3 Req'd)
AS-LTG	Gauge
AS-LT1-02	Regulator

CHANGING HAMMER TIPS

Step No. 1:
Remove 4 No. 10-24 x 1 1/2" Cap Screws and remove Hammer Tip and Valve Assembly.

Step No. 2:
Hold hammer tip with wrench (or in vise) and use 1/4" hex wrench to remove (or install) hammer tip.

NOTE: TIGHTEN ASSEMBLY SECURELY WHEN INSTALLING HAMMER TIP.

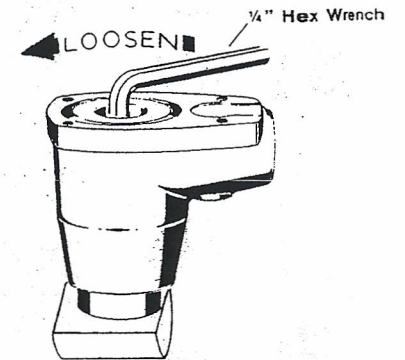

NOTE: OPERATION ABOVE 125 P.S.I. MAY CAUSE INTERNAL DAMAGE

HAMMER TIP and VALVE ASSEMBLY

