

TROUBLE SHOOTING FOR MODEL RN-16

PROBLEM	PART TO INSPECT	POSSIBLE CAUSE/<i>REMEDY</i>
BLOWING AIR, WILL NOT CYCLE	105 VALVE	STUCK IN MID-CYCLE POSITION/ <i>RELEASE VALVE: ABRUPTLY SLAP CAP SIDE OF THE TOOL INTO PALM OF HAND OR TAKE TOOL APART AND MANUALLY RELEASE VALVE</i>
LEAKING AIR	10-24 X 5/8 SCREWS	LOOSE, DAMAGED, OR WORN/ <i>TIGHTEN AND/OR REPLACE</i>
	112 GASKET	DRY, DAMAGED, OR WORN/ <i>SOAK IN OIL AND/OR REPLACE</i>
	119 VALVE	SOFT, CRACKED, GUMMY, LIFTING/ <i>REPLACE</i>
	O-RINGS/187 BUMPER	WORN AND/OR DAMAGED/ <i>REPLACE</i>
TOOL RUNS AUTOMATIC	114 BUMPER	SWOLLEN AND/OR DAMAGED/ <i>REPLACE</i>
LACK OF POWER, STALLS OUT	O-RINGS/187 BUMPER	WORN AND/OR DAMAGED/ <i>REPLACE</i>
		<i>*IMPROPER FITTING SIZE/ USE 3/8" SERIES</i>
		AIR HOSE TOO LONG, COMPRESSOR SIZE, DIRTY AIR SUPPLY, USE OF SOLVENTS OR DETERGENT OILS/ <i>ADJUST ACCORDINGLY</i>
SHEARING NAIL HEADS		IMPROPER SIZE GUIDE/ <i>ORDER CORRECT SIZE OF GUIDE</i>

*****NOTE: ALWAYS USE A 6 TO 10 WEIGHT NON-DETERGENT OIL FOR LUBRICATION. WHEN CLEANING INTERNAL PARTS, AVOID USE OF SOLVENTS ON ALL RUBBER & URETHANE PARTS. USE OF DETERGENT OILS AND SOLVENTS WILL DAMAGE THE INTERNAL RUBBER AND URETHANE PARTS.**